

INNOVATIONS®

THANK YOU for your purchase of Innovations! Below are our hanging instructions, intended to help you accomplish a beautiful installation. Before proceeding with your installation, check your material and packing slip to ensure you've received your order in entirety. Also check for signs of defects prior to installation of material. If at any time you have questions regarding your installation, please call our offices at 800.227.8053.

Please note that Innovations is unable to entertain product claims after three (3) panels have been hung or if material is cut and glued in excess of three (3) drops.

Pattern: Bordado

Recommended Primer: Pigmented Acrylic Wallcovering Specific Primer

Recommended Adhesive: Non-strippable, heavy duty, clear wallcovering adhesive

Recommended Wall Surface: Level 4 sheetrock finish or similar

Seams/Paneling Visibility: Noticeable Seams with Minor Paneling

Hanging Directionality: Straight Hang

Pattern Matching: Straight Match (see Pattern Notes below for details)

Trimming/Hanging Method: Table trim and butted on the wall

Recommended Smoother/Roller: Soft Bristle Brush and Soft Roller

Wrapping Corners: You can wrap corners with this material, however excessive wear may occur on the corner. Please be sure to wrap your corners by at least 6". Do not pull material too taught or it may pull away from the wall.

1. Begin installation by inspecting the material you have received. Ensure all material is visually defect free and matches packing slip.
2. Using correct wallcovering primer, apply primer to destination wall and allow primer to dry.
 - a. Always make sure your installation location is properly climate controlled.
3. Apply paste to backing of material using an adhesive roller. Avoid oversaking and ensure even application. DO NOT USE a pasting machine as it will add too much water content to paste.
4. Once material has properly been booked to ensure proper level of tack, apply material to the primed wall.
 - a. Hang material in sequence as it comes off the roll, including short drops around windows, doors, and other obstructions on your wall.
5. DO NOT get adhesive on the face of material. Adhesive is very difficult to clean and next to impossible to remove after it is dry without potentially damaging the wallcovering face. Dried adhesive also tends to leave a hazy appearance.
 - a. To avoid getting adhesive on the face of material, we recommend using a low-adhesive safe-release painter's tape on the seams to keep the product face clean.
6. When trimming this product, we advise you to use a new razor blade with each cut. A dull razor blade is the primary cause of fraying and unsightly seams. DO NOT USE a seam buster.


Pattern Notes

- As a jacquard weave, you will experience variation in the thread thickness and pattern match of both the warp and weft. An acceptable seam is shown below, titled **Installed Seam Image**.
- There is a selvage on both sides of Bordado, that when trimmed, will leave a useable panel width of 48–49". When trimming the selvage, trim down the center of what we refer to as the "tear drop". You will do this on adjoining panels, and collectively they will make a complete tear

INNOVATIONS®

drop when butted back up against one another on the wall. Trim conservatively and leave room for error.

- Bordado has a vertical repeat of 65" and requires a straight match. Take this into consideration when preparing your drops.

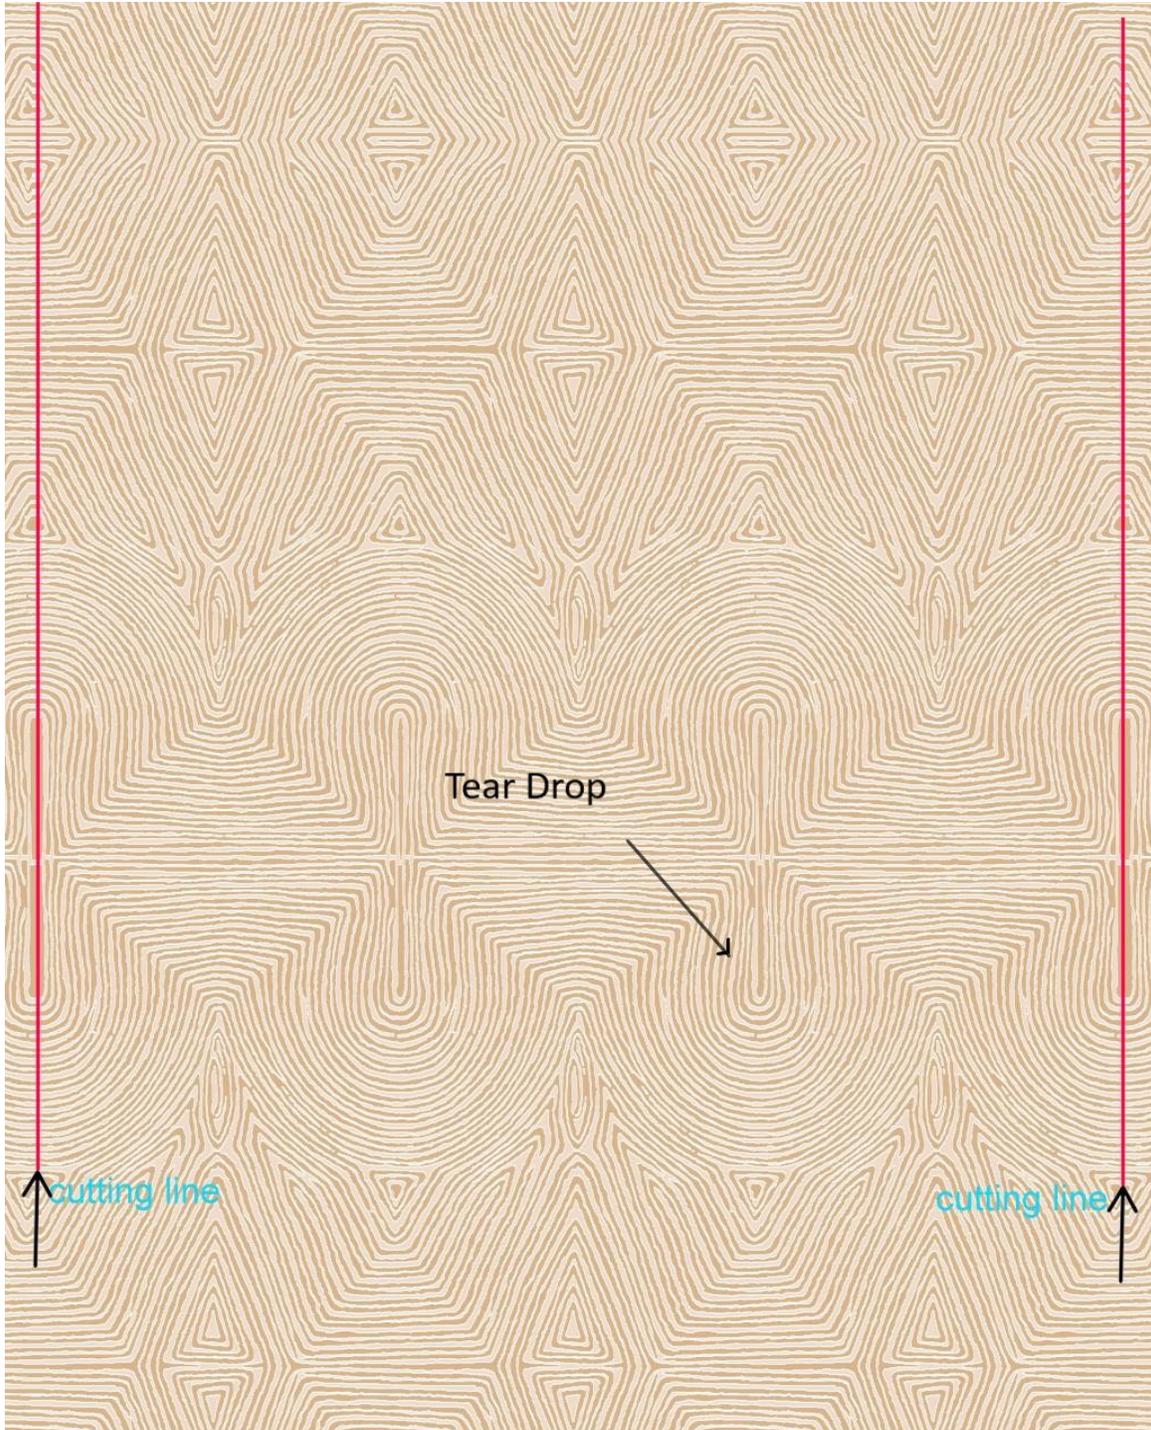

INNOVATIONS®

Installed Seam Image:

*The seam in this image was trimmed conservatively to preserve the tear drop mentioned above.

