INNOVATIONS®

THANK YOU for your purchase of Innovations! Below are our hanging instructions, intended to help you accomplish a beautiful installation. Before proceeding with your installation, check your material and packing slip to ensure you've received your order in entirety. Also check for signs of defects prior to installation of material. If at any time you have questions regarding your installation, please call our offices at 800.227.8053.

Please note that Innovations is unable to entertain product claims after three (3) panels have been hung or if material is cut and glued in excess of three (3) drops.

Pattern: Celeste
Recommended Primer: Pigmented Acrylic Wallcovering Specific Primer
Recommended Adhesive: Non-strippable, heavy duty, clear wallcovering adhesive
Recommended Wall Surface: Level 4 sheetrock finish or similar
Seams/Paneling Visibility: Noticeable Seams with Light Paneling
Hanging Directionality: Straight Hang
Pattern Matching: Side-Match (see pattern note below)
Trimming/Hanging Method: Pre-trimmed, butted on the wall. If additional trimming is needed, we recommend table trimming.
Recommended Smoother/Roller: Soft Bristle Brush and Soft Roller
Wrapping Corners: We advise against wrapping corners, as wood veneer does not crease without the risk of splintering.

1. Begin installation by inspecting the material you have received. Ensure all material is visually defect free and matches packing slip.
2. Using correct wallcovering primer, apply primer to destination wall and allow primer to dry.
    a. Always make sure your installation location is properly climate controlled.
3. Apply paste to backing of material using an adhesive roller. Avoid oversoaking and ensure even application. DO NOT USE a pasting machine as it will add too much water content to paste.
4. Once material has properly been booked to ensure proper level of tack, apply material to the primed wall.
    a. Hang material in sequence as it comes off the roll, including short drops around windows, doors, and other obstructions on your wall.
5. DO NOT get adhesive on the face of material. Adhesive is very difficult to clean and next to impossible to remove after it is dry without potentially damaging the wallcovering face. Dried adhesive also tends to leave a hazy appearance.
    a. To avoid getting adhesive on the face of material, we recommend using a low-adhesive safe-release painter's tape on the seams to keep the product face clean.
6. When trimming this product, we advise you to use a new razor blade with each cut. A dull razor blade is the primary cause of fraying and unsightly seams. DO NOT USE a seam buster.

Pattern Notes

- Celeste has a repeat of H: 8 3/4" V: 13 1/2" and is intended to be side matched.
- This item is composed of real wood veneer. Wood knots, natural blemishes and color imperfections are to be expected and are not considered a defect.
- Wood veneer can occasionally curl. We advise that you lay material flat prior to hanging to prevent curling during installation.

INNOVATIONS®

Pattern Repeat Diagram

CELESTE

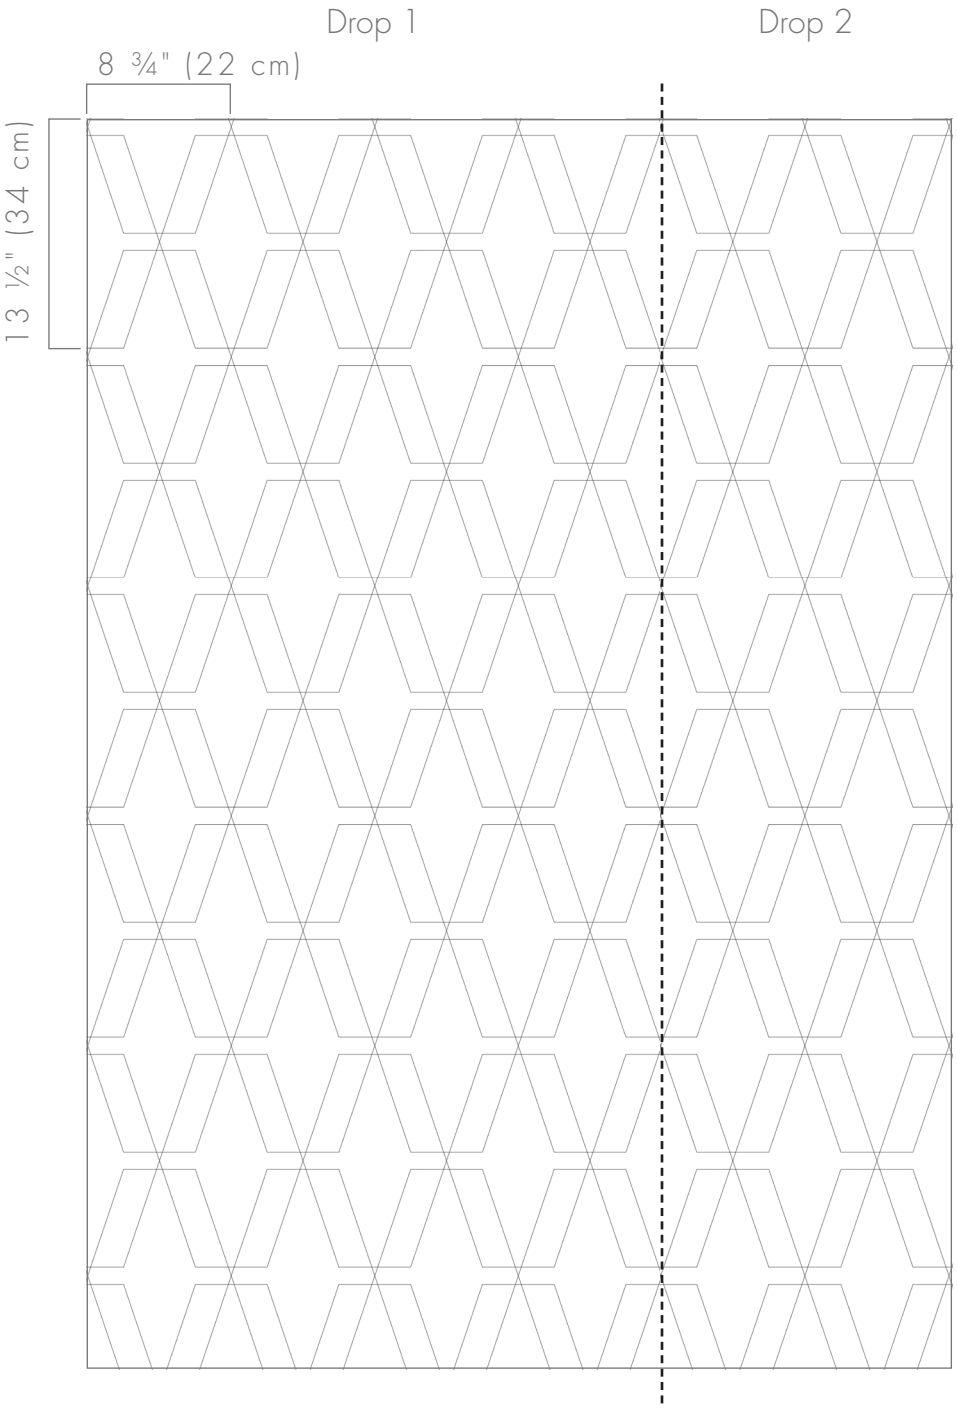

150 Varick Street New York, NY 10013 | t. 800.227.8053 | f. 212.807.1944 | innovationsusa.com